

How to use the Wolflok

Unlocking the key lock box


To unlock the Wolflok use the following steps:

1. Pull down the weather cover
2. Ensure the arrow is pointing at the locked symbol (*image 2*)
3. Push the clear button down
4. Enter the code on the keypad, ensuring each button clicks as it's pressed
5. Turn the knob clockwise with the arrow going underneath, until it points to the unlocked symbol. The key lock box should now open.

If the above instructions do not work -

- Check you have the correct code
- Clear any previous attempts by pressing down the clear button
- Ensure the arrow is pointing at the locked symbol (*image 2*)
- Try again

**Open: Clockwise
Close: Counterclockwise**

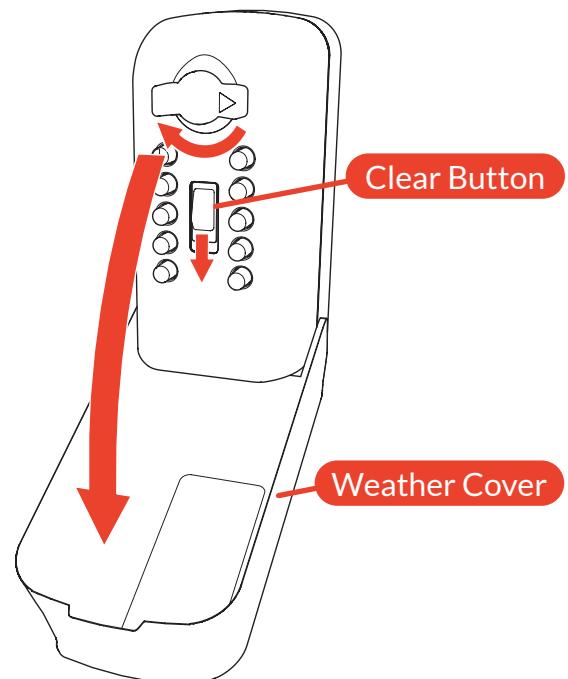

Locking the key lock box

To lock the key lock box:

1. Ensure any keys being stored are placed on the internal hooks
2. Close the lid and push it firmly against the base
3. Turn the knob counterclockwise until the arrow points towards the locked symbol (*image 2*)
4. Close the weather cover up and push it on to the lid, it should click in to place if done correctly

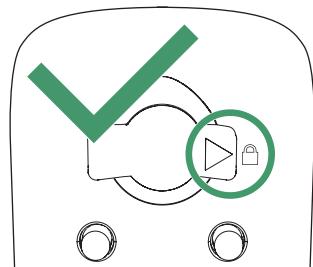


Image 2